


TEMPORARY METER LOOP (OVERHEAD)

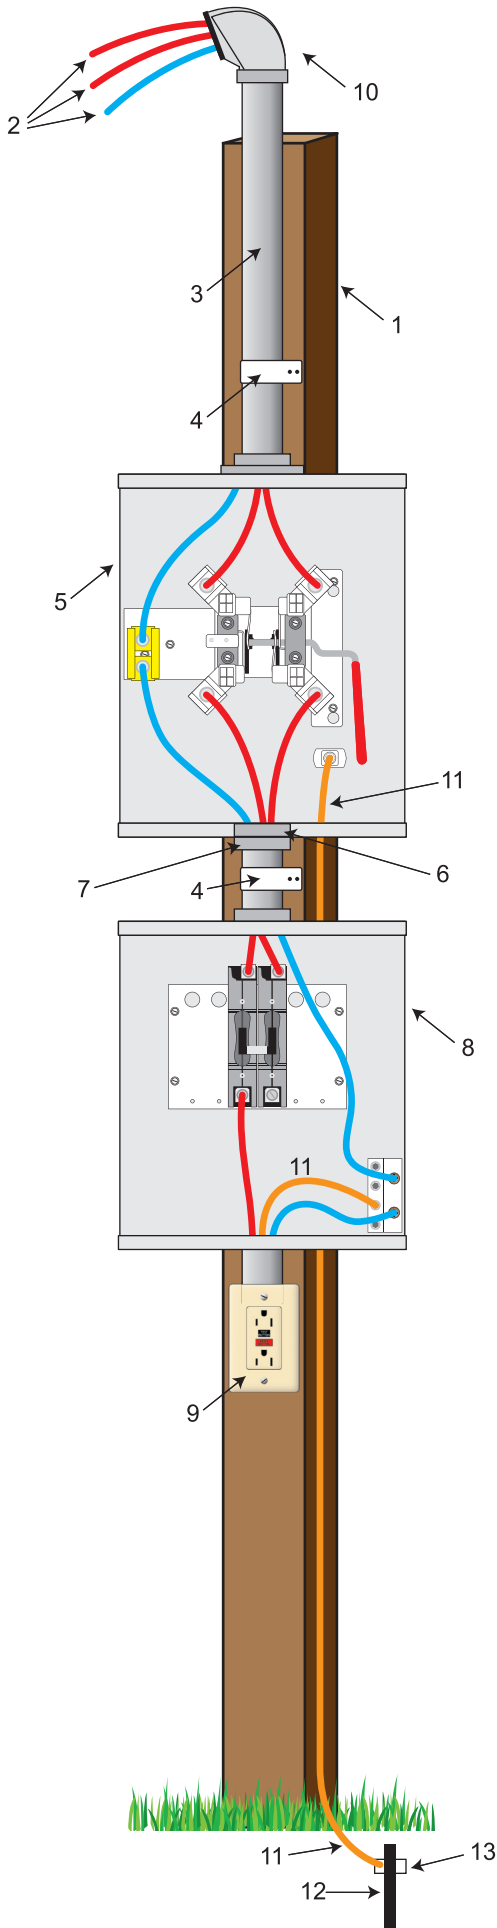

Material List

1. 4" x 4" post - 12 feet
 2. 3 #8 TW or RHW copper wires as needed
 3. 1" Rigid Conduit - NO PVC
 4. 1" Conduit clamps - 2
 5. Meter Socket
 6. 1" Insulated type bushing - 1
 7. 1" Locknuts - 2
 8. Weatherproof breaker box
(1-20 amp, 2-30 amp (for 220V))
 9. Ground fault circuit interrupter
with weatherproof cover
 10. Weatherhead (3-hole)
 11. #6 SDC ground wire
 12. 5/8" x 8' Ground rod
 13. 5/8" Ground rod clamp
- (You may want to enclose this receptacle in a box that can be locked to prevent others from using it in your absence.)



525 U.S. Route 40, Greenville, IL 62246
(800) 637-8667 • www.sweci.com